



Assembly Instructions: ***R&DURO Storage System***


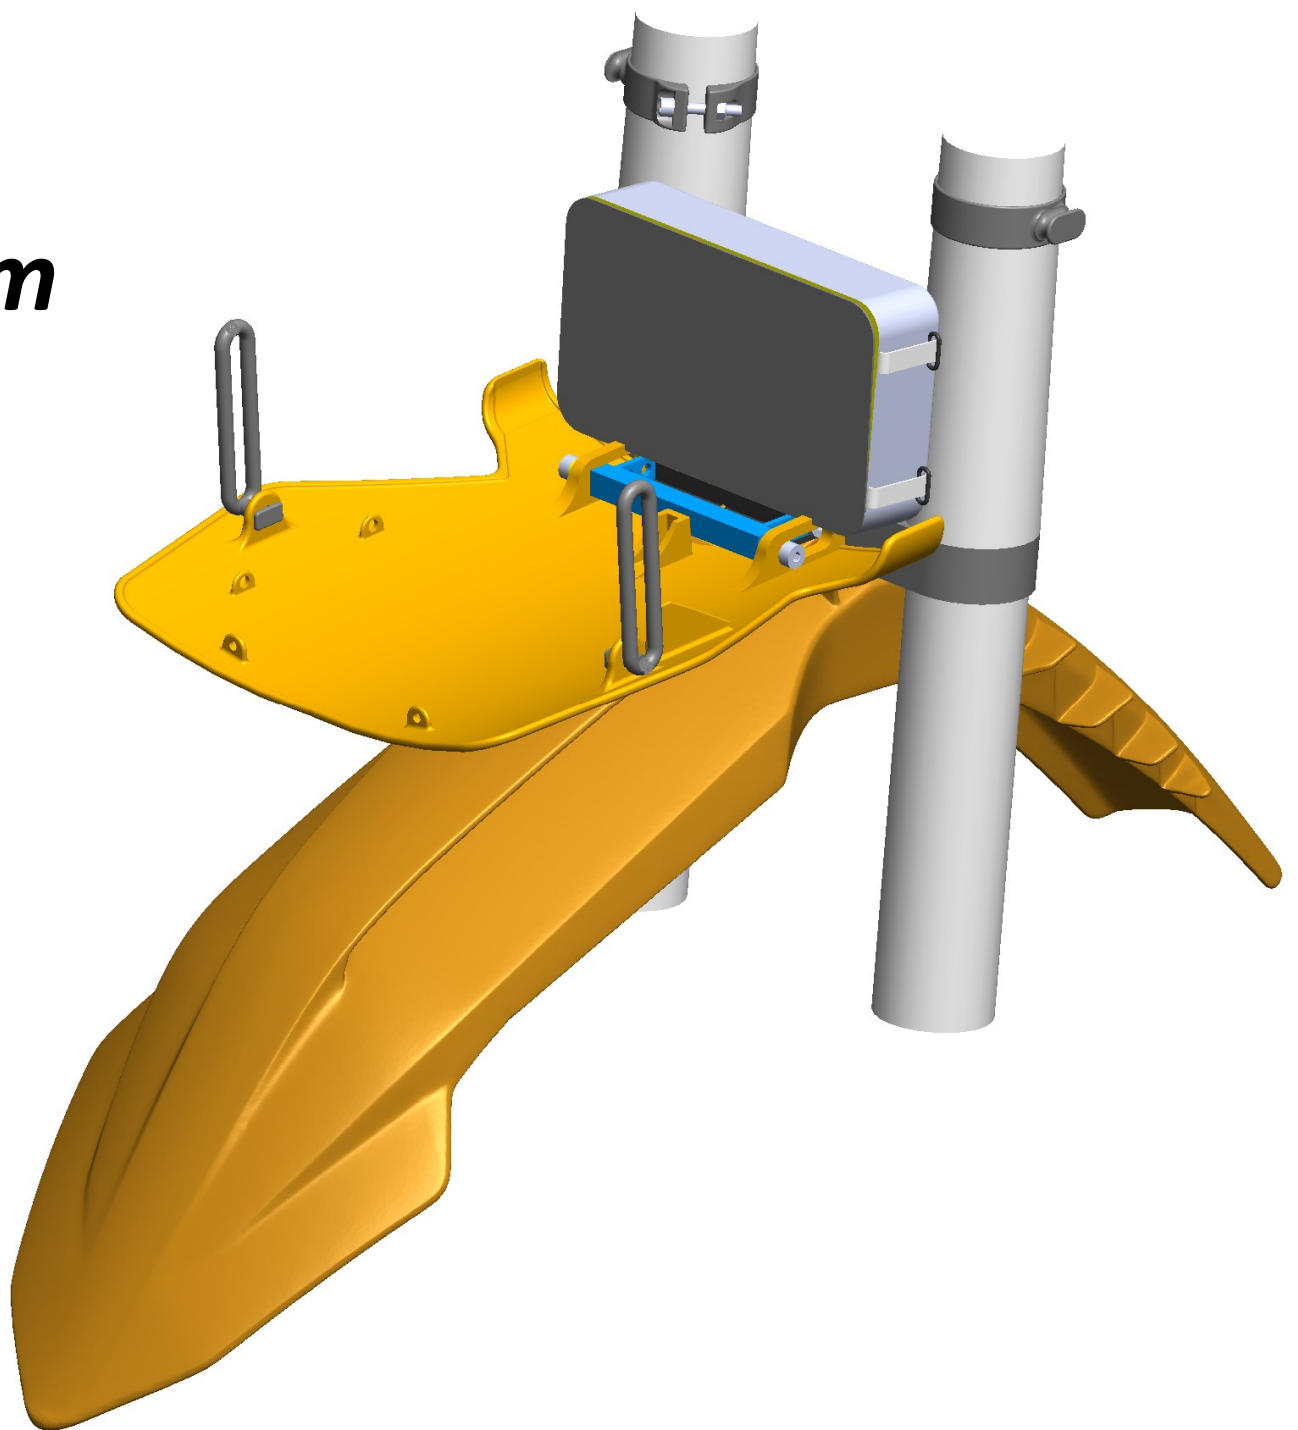


Step 01: Remove the original front number plate or headlight assembly.


Step 02: Remove the two upper bolts from the front fender.

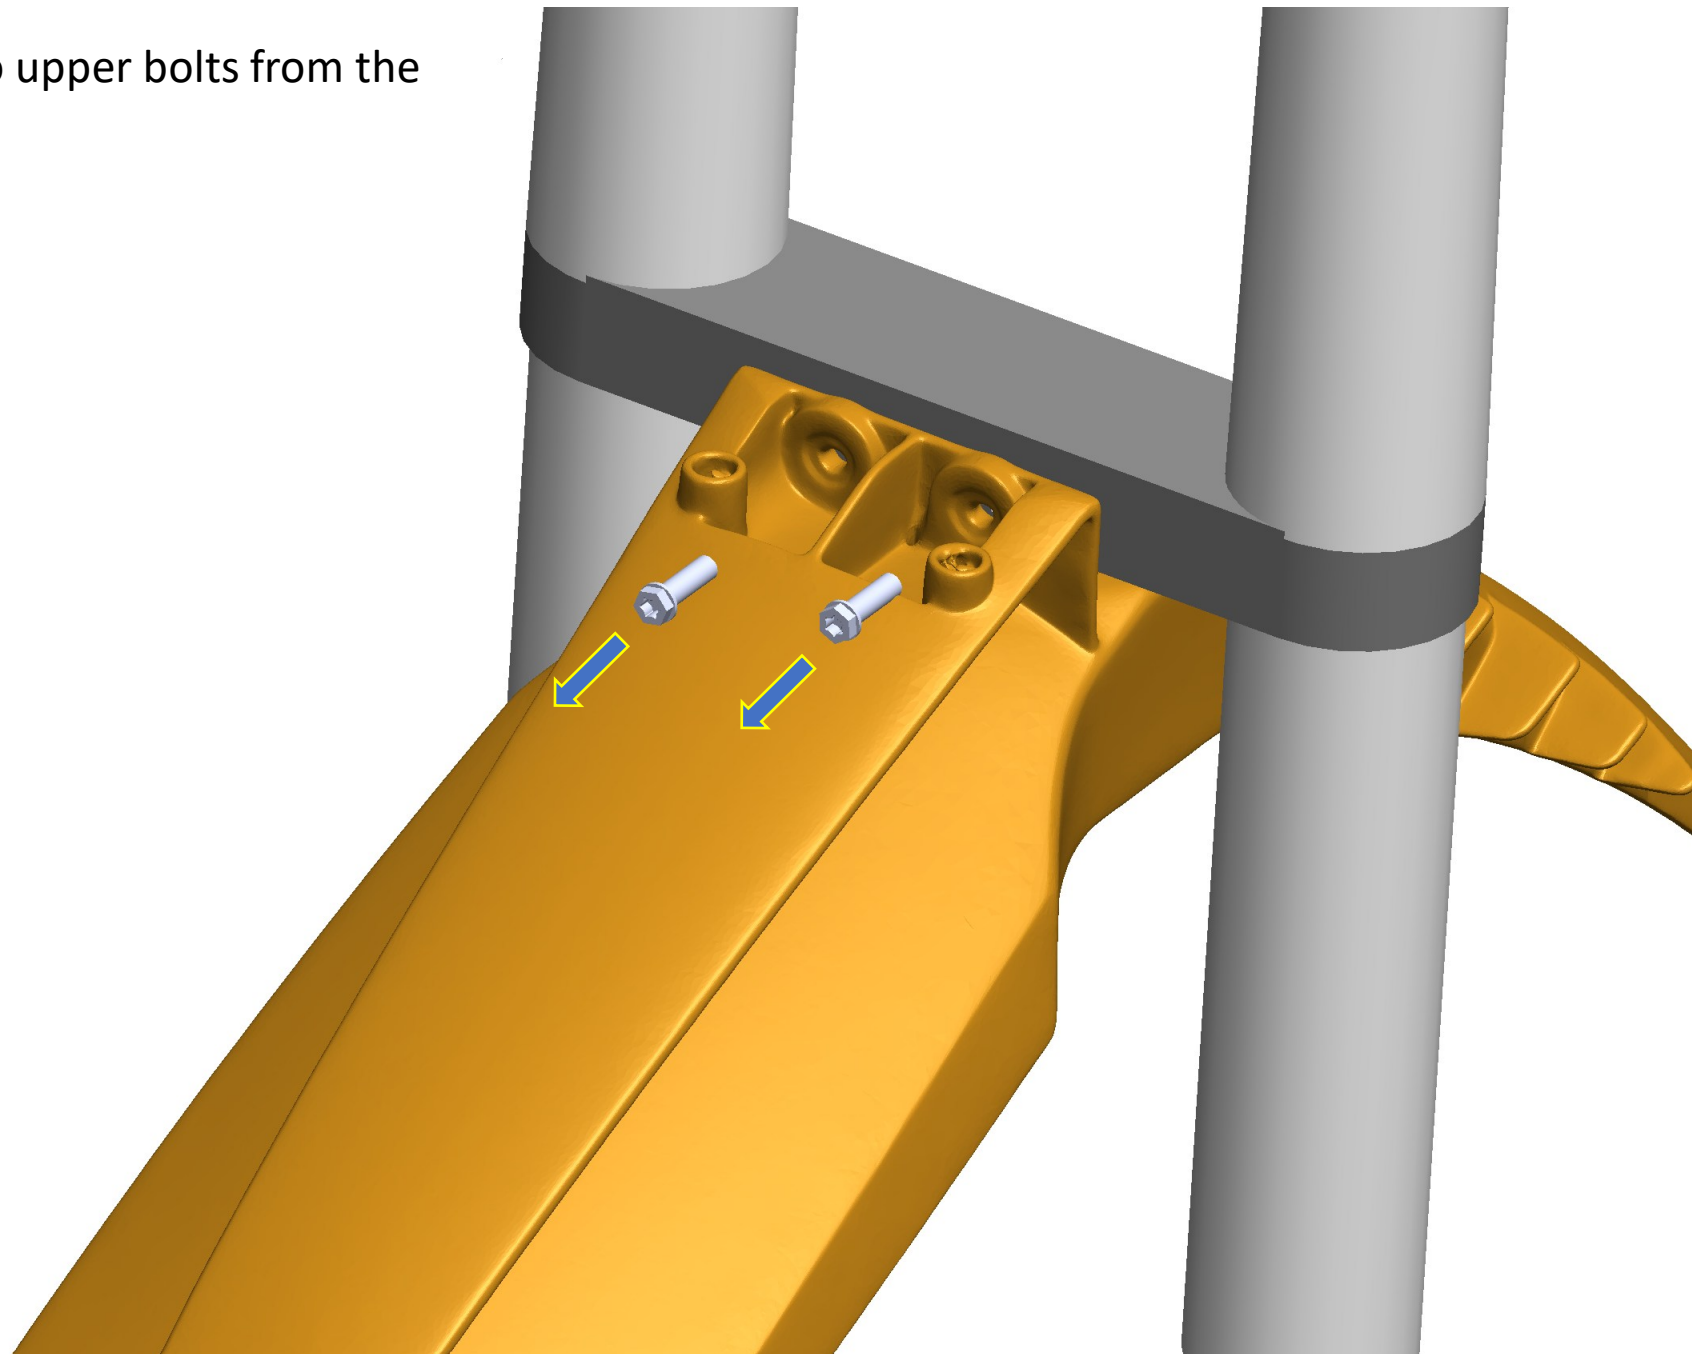


Step 03: Assemble the adapter using the two supplied M6 × 25mm bolts. Apply blue Loctite to the threads.

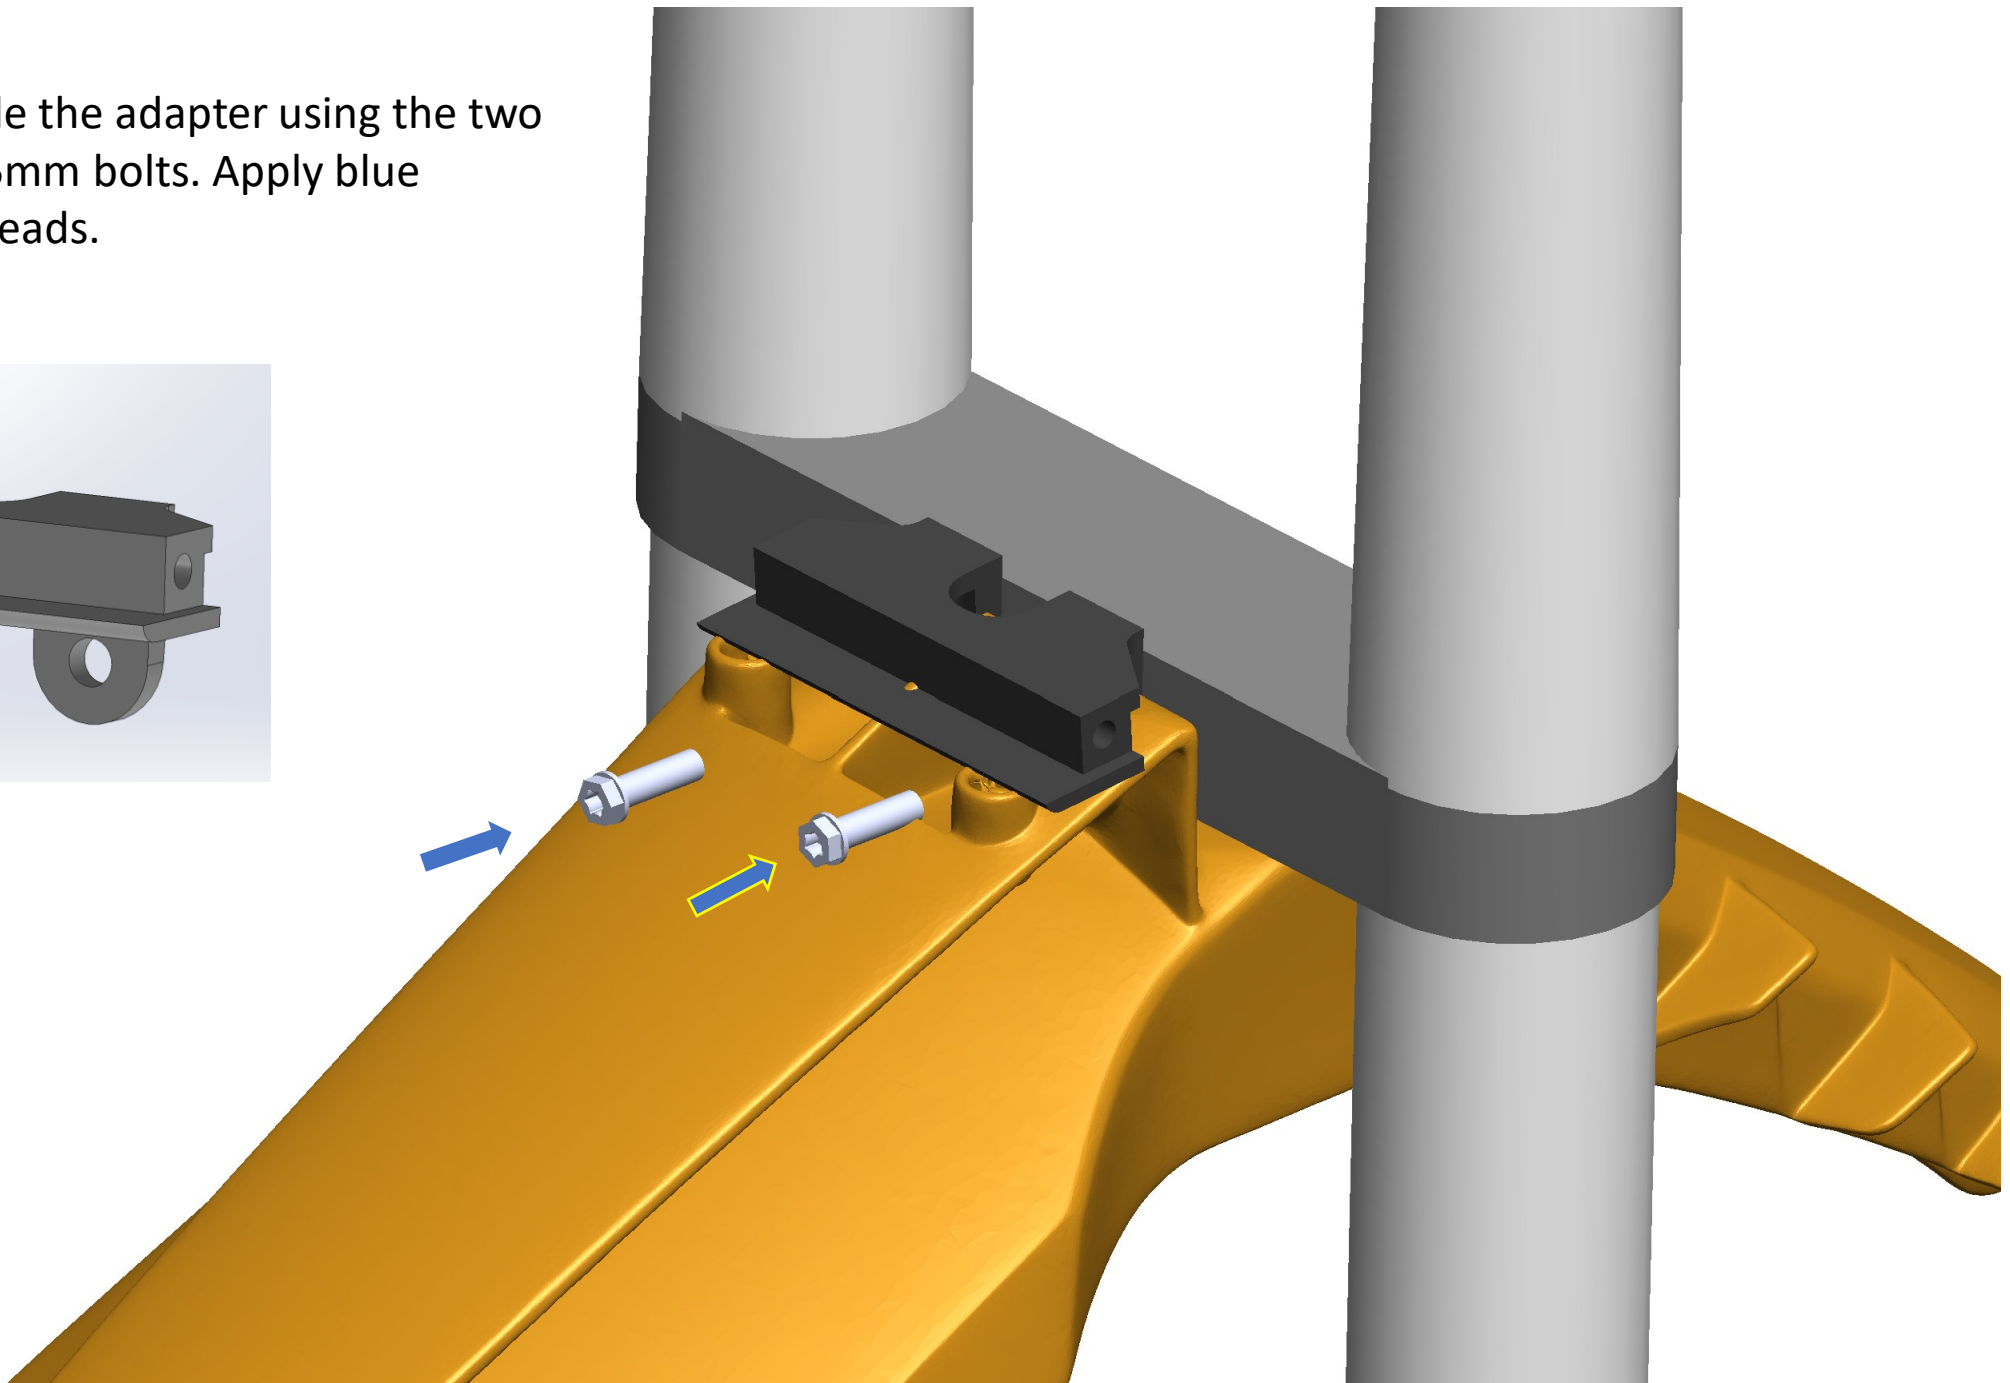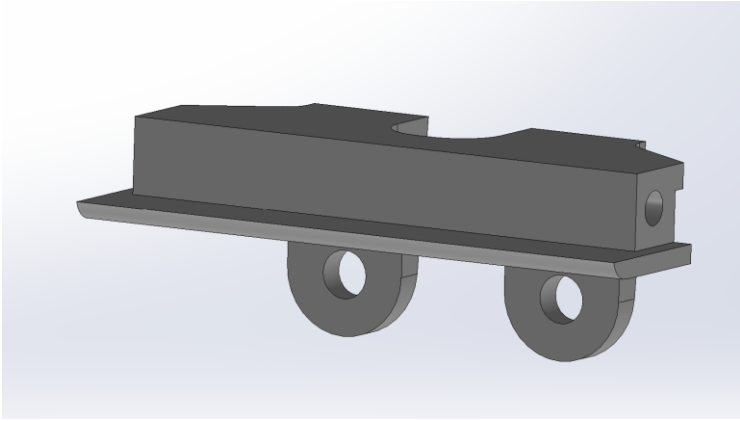


Step 04: Remove the two M6 bolts supplied with the adapter.

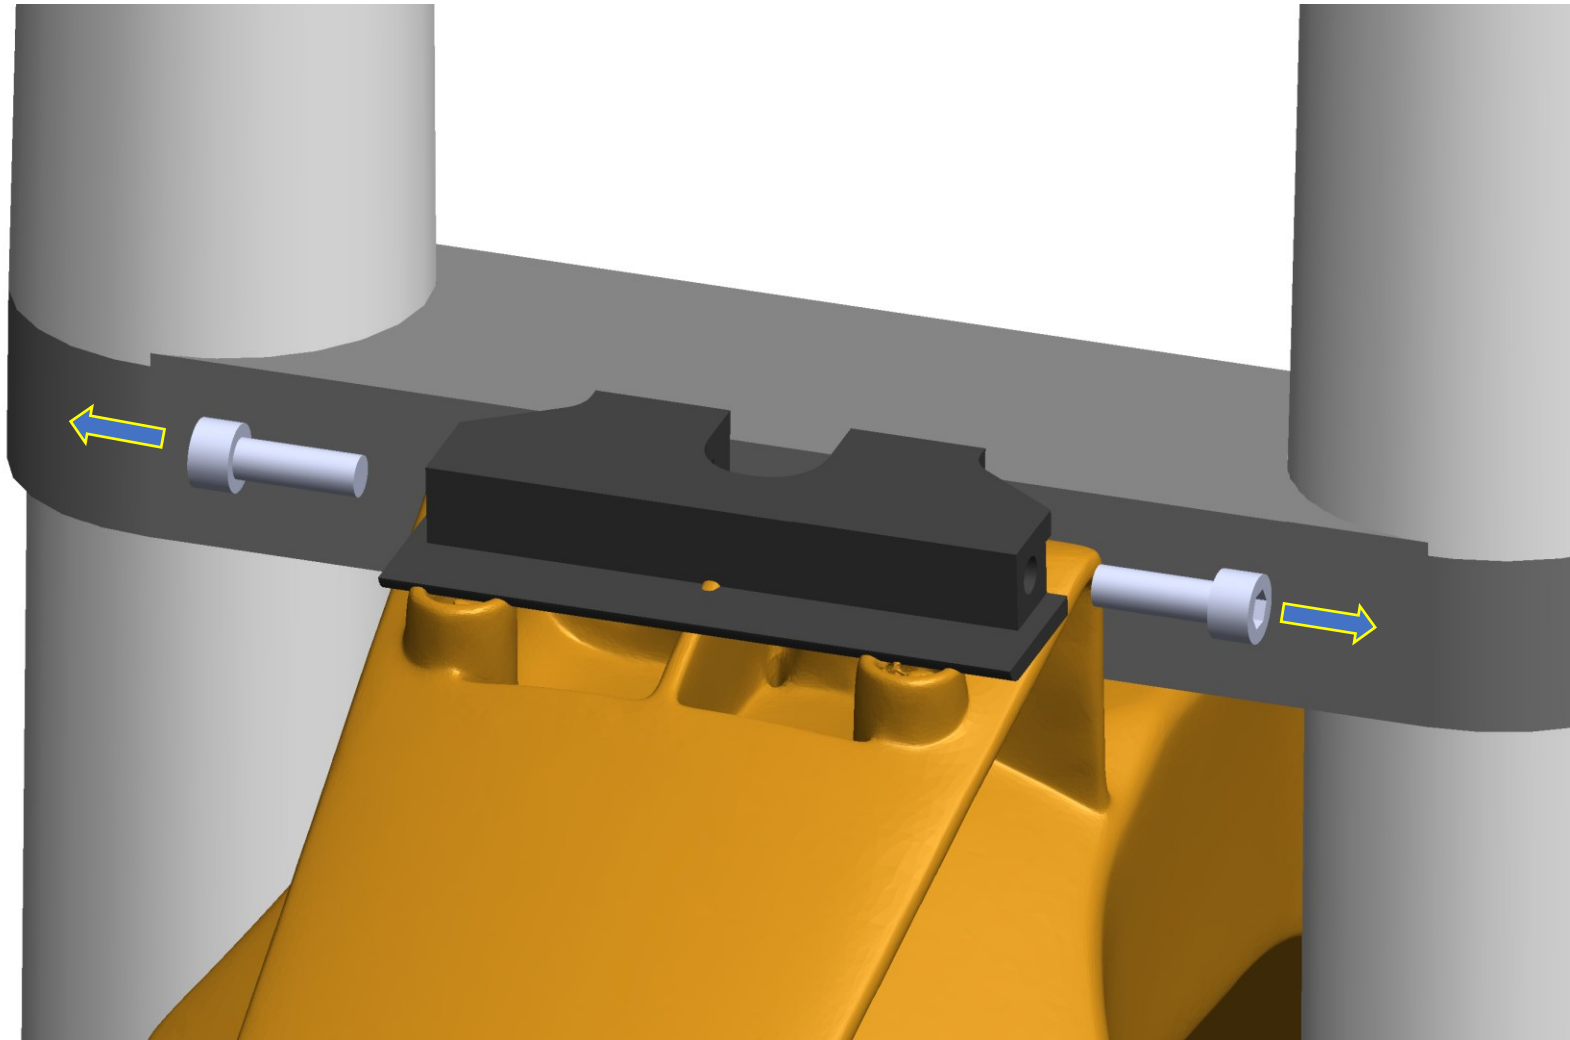


Step 05: Assemble the new folding number plate. When using the bag, we recommend installing it in the middle hole. Select a different hole if you need more or less storage space. Use the supplied M6 Allen bolts and apply blue Loctite to the threads.

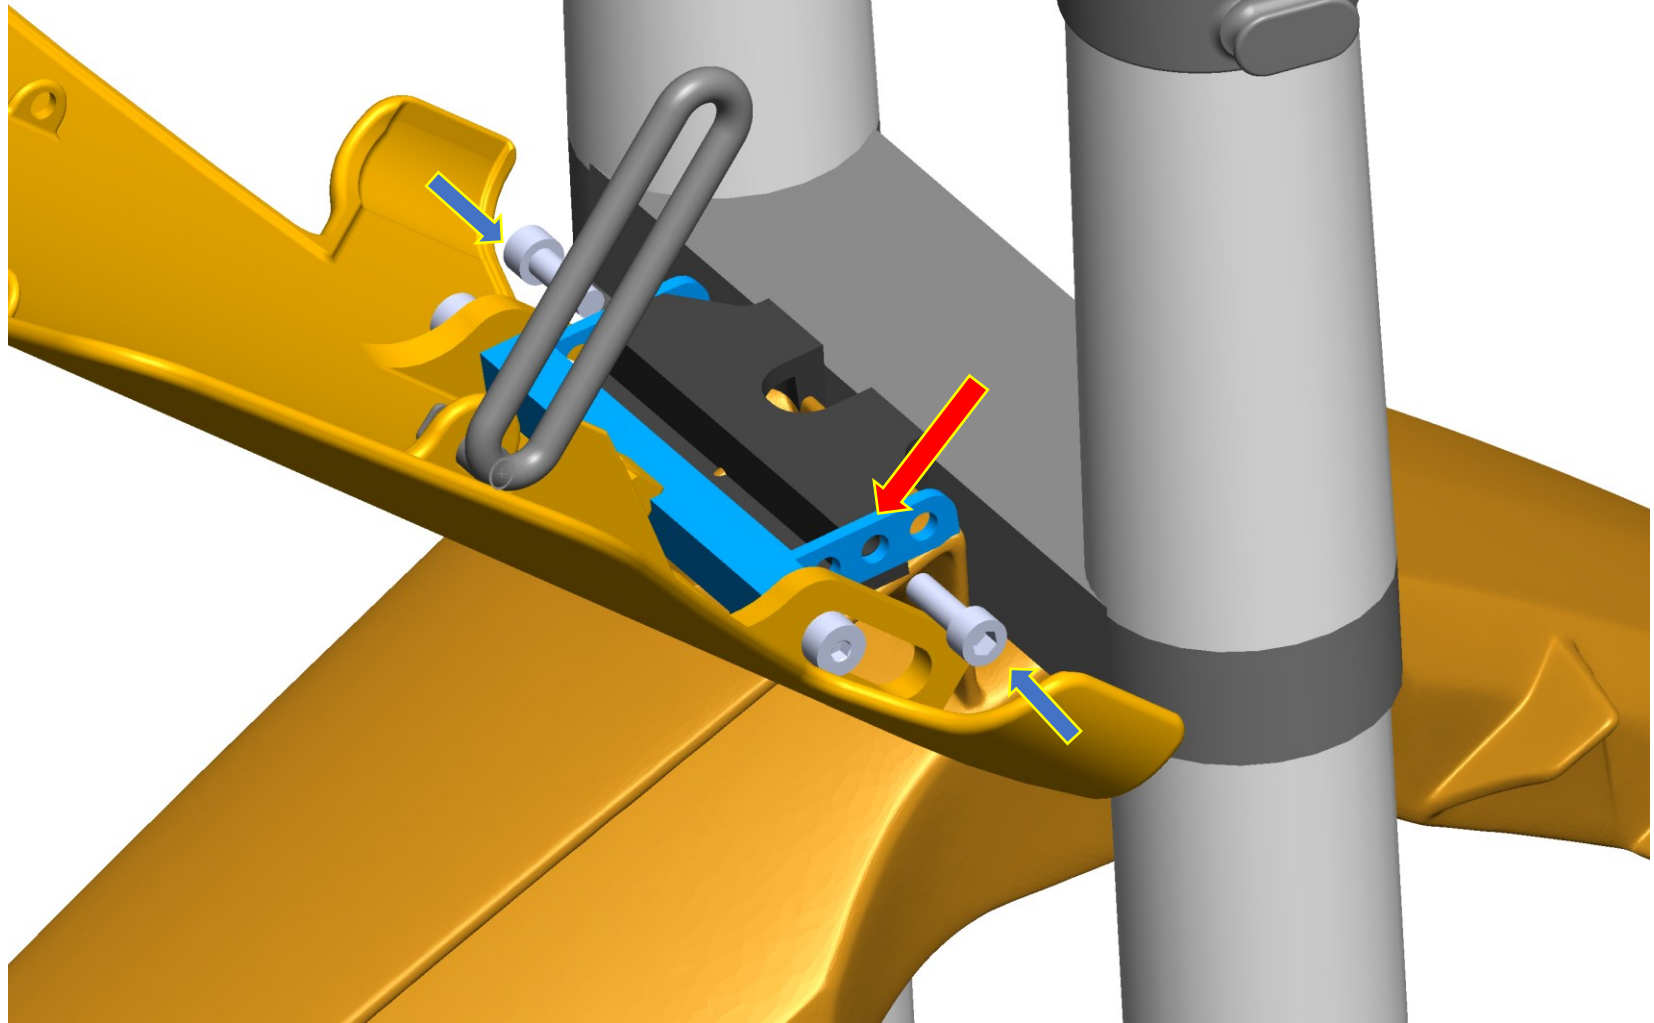

Step 06: Loosen the triple clamp bolts and lower the fork slightly, just enough to slide the two clamps into position. Install the clamps as mirror images, with the bolts facing outward from the rider. Leave the bolts finger-tight at this stage.

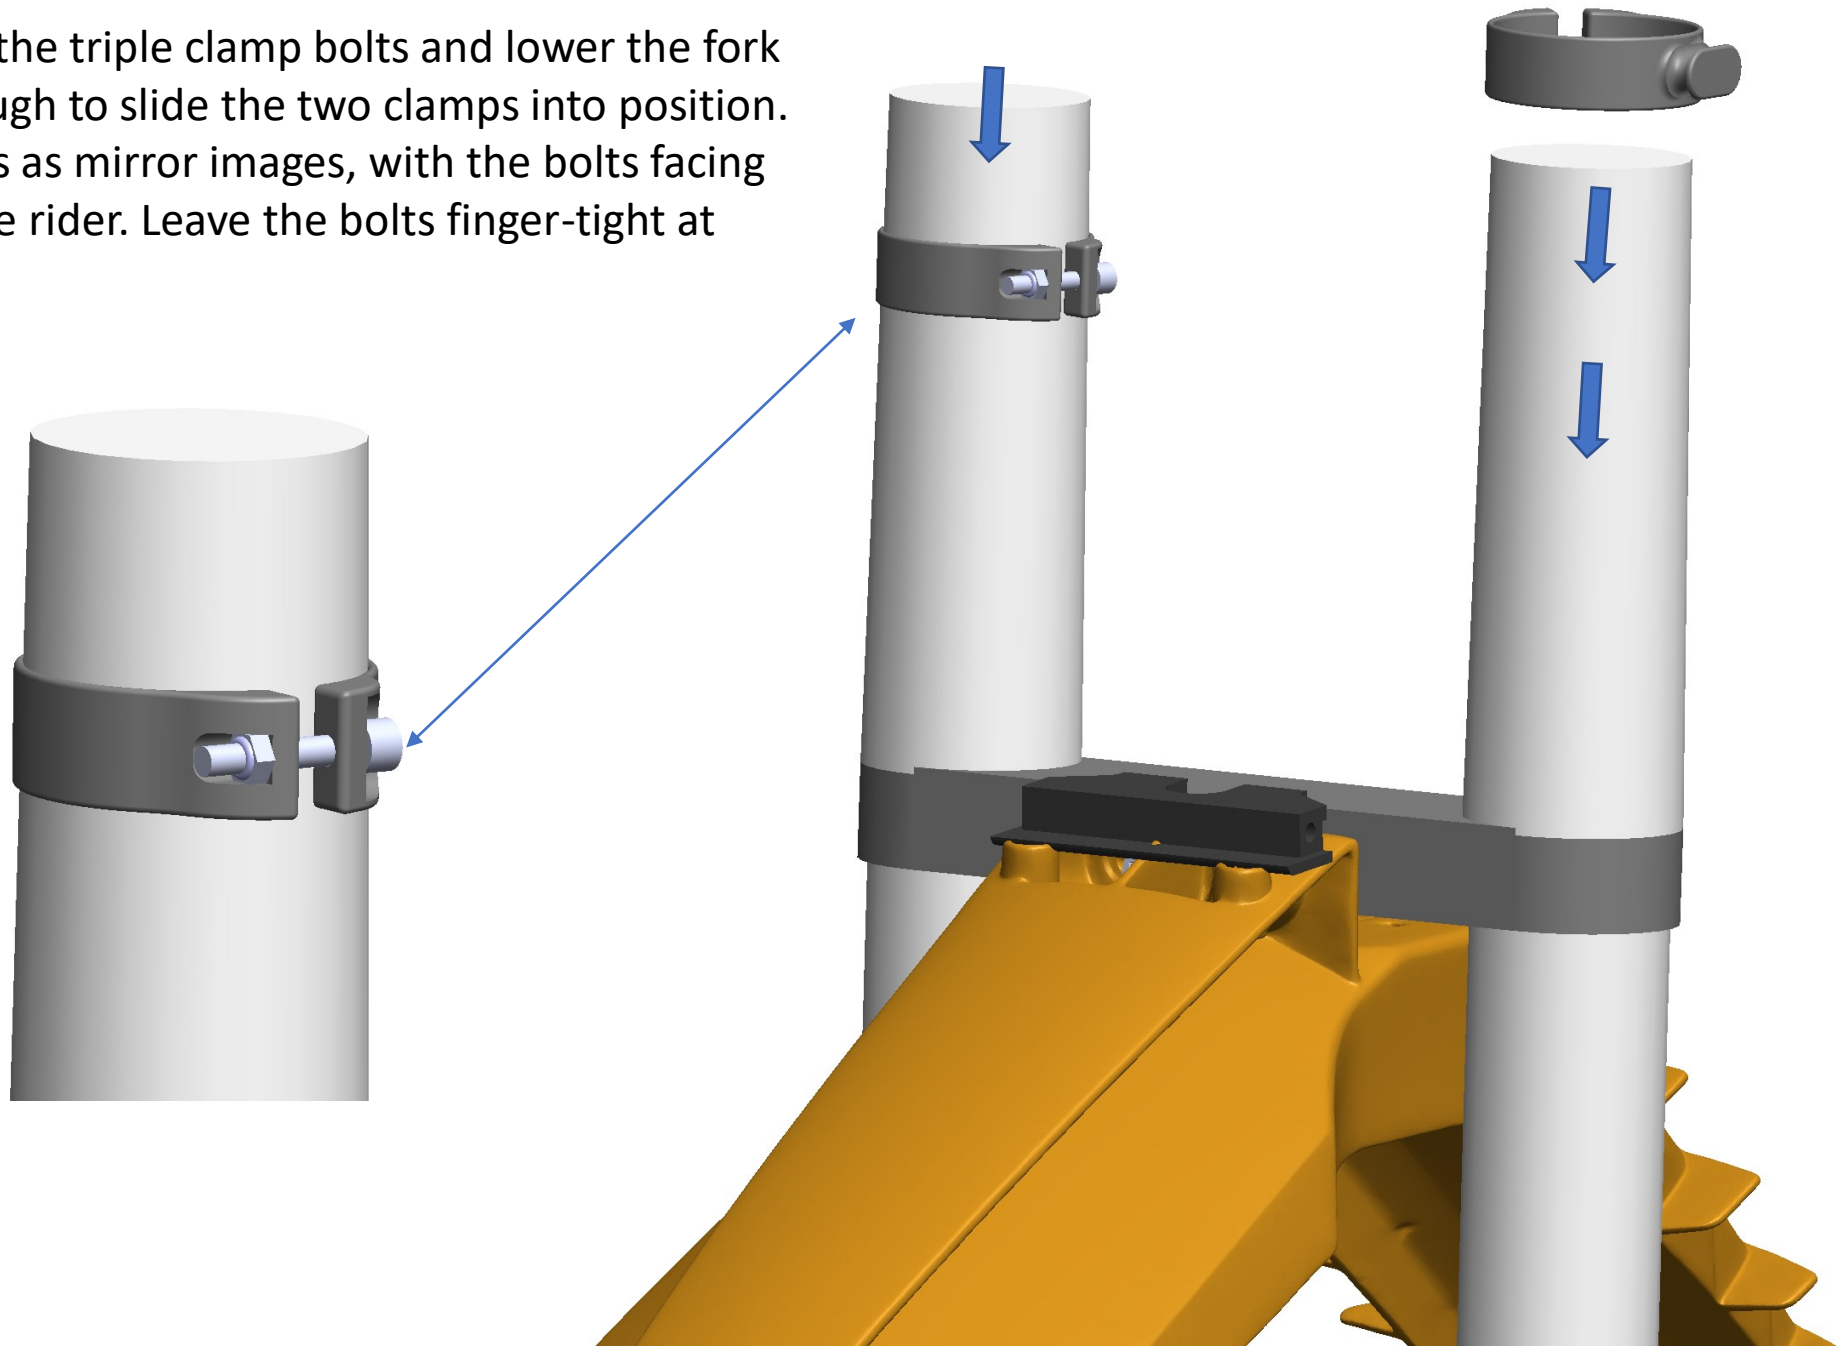


Step 07: Secure the bag to the fork using zip ties or other suitable straps. Ensure the bag is centered before tightening.
Note: Zip ties are not included in the kit.

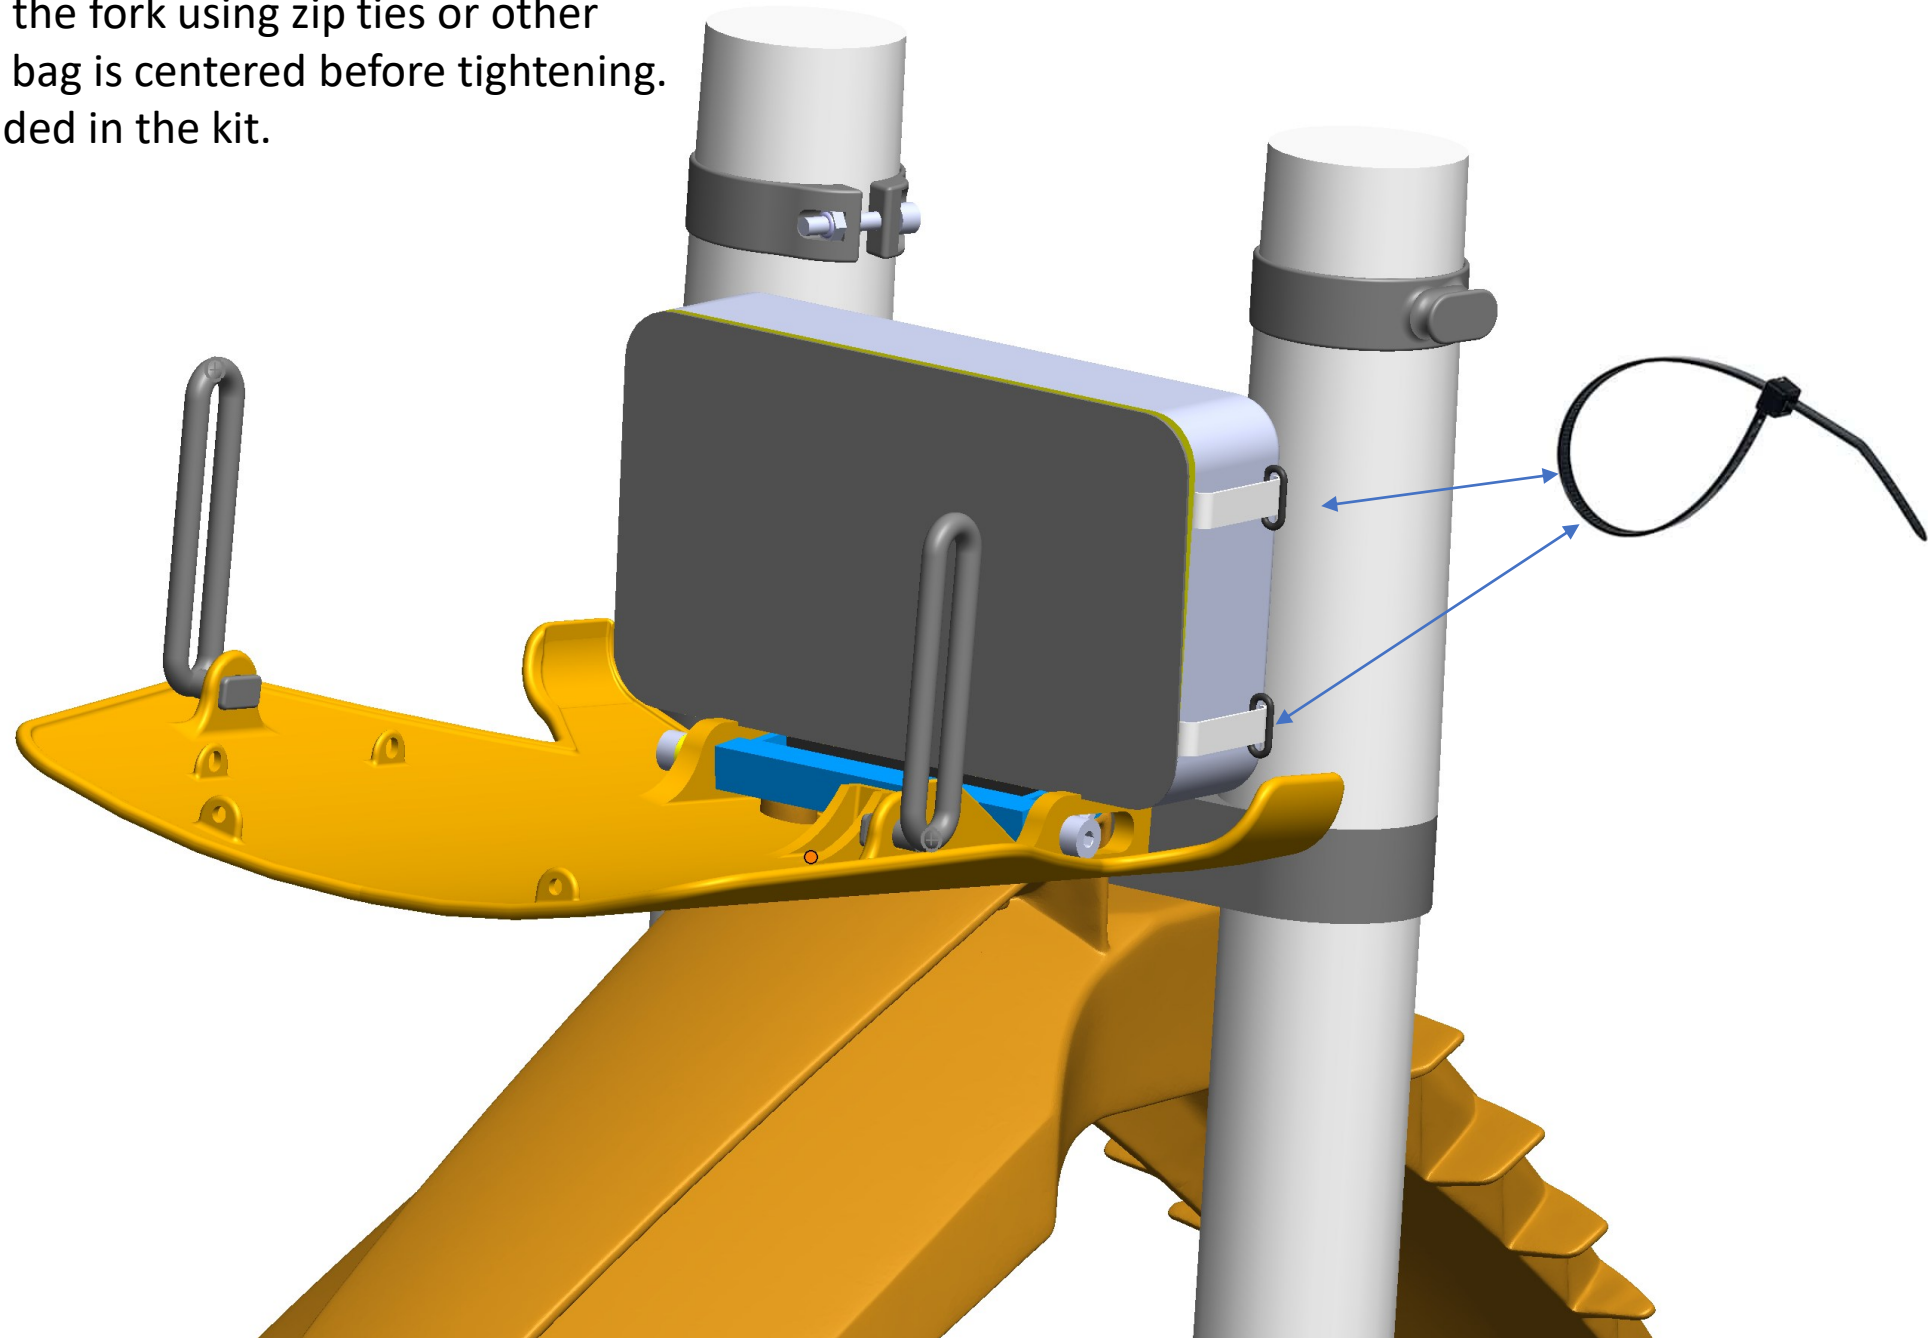

- Step 08:** Orient the clamp so that the rubber strap is slightly tensioned to secure the plate, then tighten the bolts.

- The nut has a groove, allowing you to use only an Allen key without the nut rotating.



- Do not overtighten the clamp, so the rider can still barely twist the bracket by hand, but the rubber strap's tension will not be enough to move it.

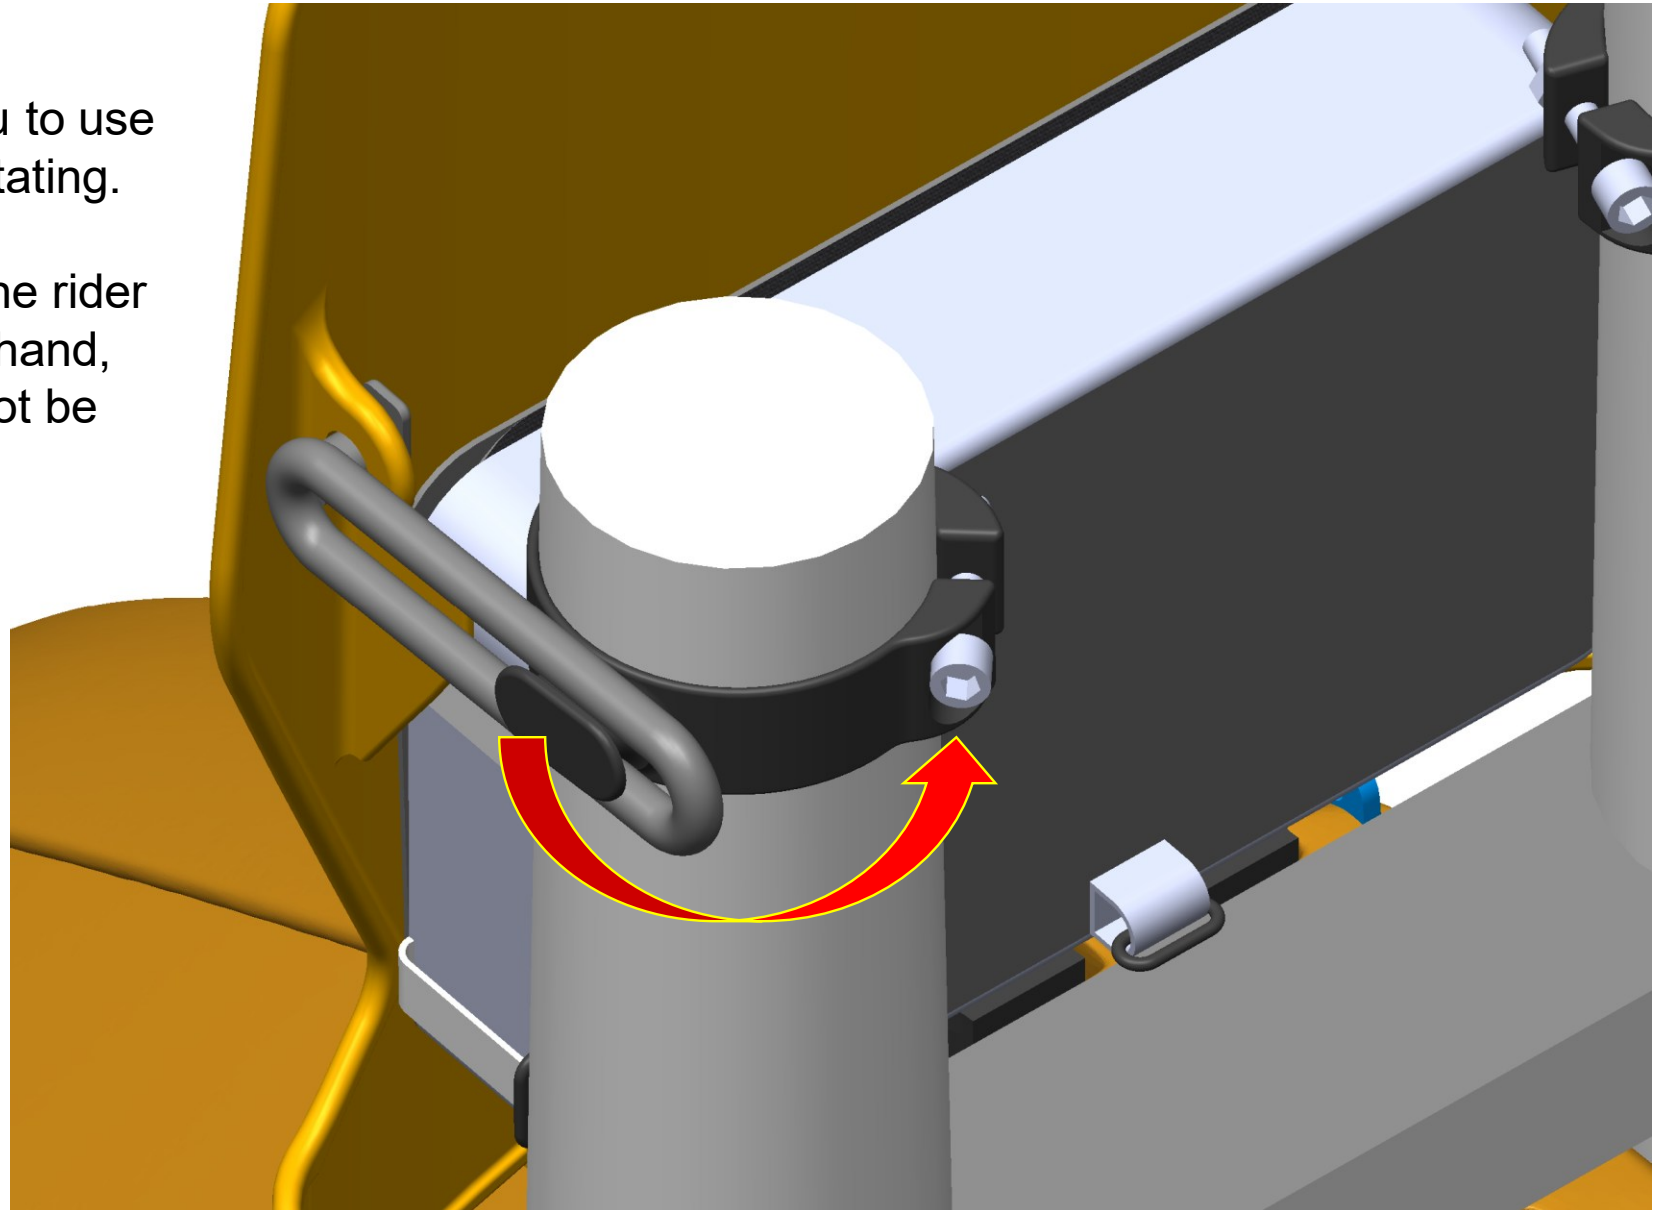

Step 9: Assemble the provided plastic bracket onto the rubber strap.

Insert the front brake cable into the bracket so the movement of the cable during riding does not rub against the rubber strap.

Be sure to repeat this step each time you open the number plate.

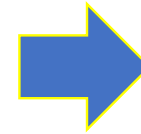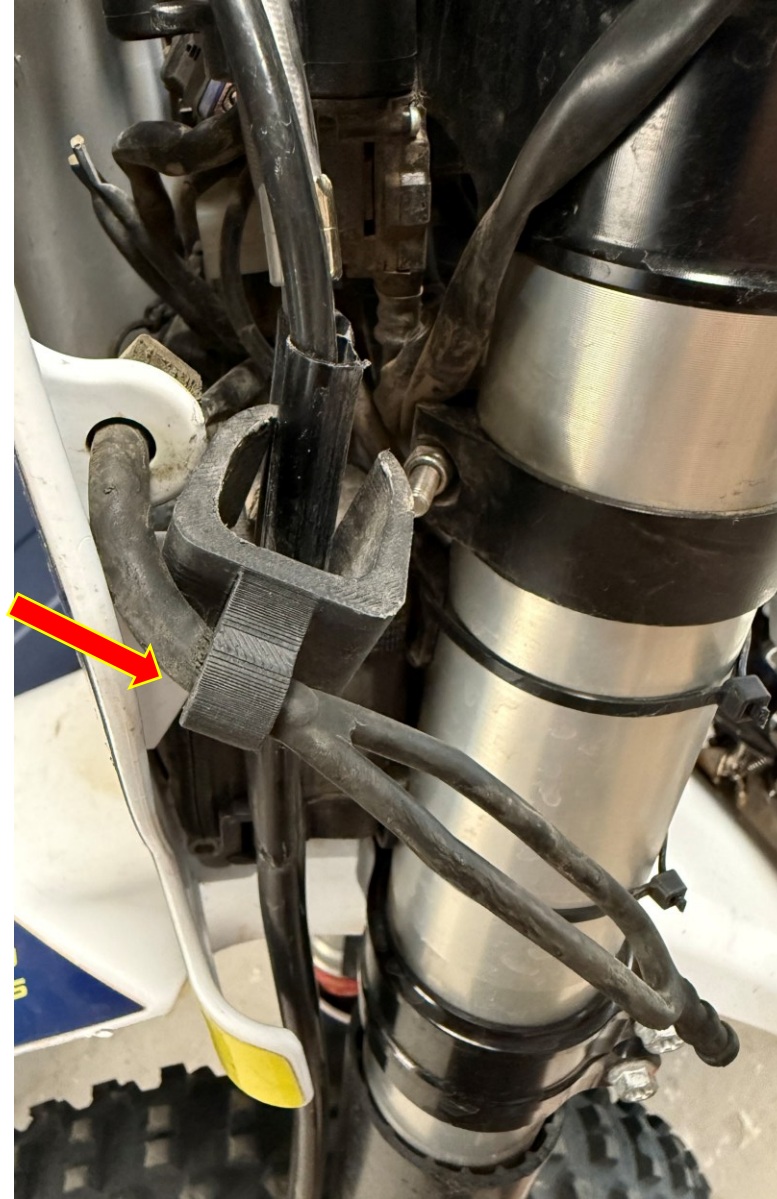

END